Changing WiFi Channels on the SpeedTouch ST585

1. Navigate to 192.168.1.254 and type in the username "admin" and the password that

was given to you.

2. Click on "Home Network" on the left-hand side.

THOMSON ST585			
SpeedTouch	[<u>Administrator</u>] <u>Home</u> > <u>SpeedTouch</u>		
⊷→ Information ⊷→ Configuration ⊷→ Event Logs Broadband Connection	Sp Sp	eedTouch Information Product Name: Serial Number: Software Release:	ST585 CP0647JT3JA 6.2.15.5
Toolbox Home Network	•	Configuration Service Name: Time Since Power-on:	Routed PPPoE on 0/35 and 8/35 0 days, 0:04:30
	Pick a ta	מאר אריי אריי	
	Return View Chee	rn to Factory Default Setting <u>/ event logs</u> ck connectivity to the Interne	<u>s</u>

3. Click on "Interfaces" below "Home Network" on the left-hand side.

THOMSON ST585	
SpeedTouch	[<u>Administrator</u>] <u>Home > Home Network</u>
Broadband Connection	Home Network
Home Network → Devices → Interfaces	Ethernet
	ethport2 (100Mbps) ethport3 (100Mbps) ethport4 (100Mbps)

4. Click on "WLAN: NCF...".

THOMSON ST585	
SpeedTouch	[Administrator] Home > Home Network > Interfaces
Broadband Connection	Interfaces
Toolbox	(International Content of the second
Home Network	*E ethport2 (100Mbps)
Devices Interfaces	E (100Mbps)
	*E ethport4 (100Mbps) ⁽¹⁾ <u>WLAN: SpeedTouchD1ECEC</u> (54Mbps)

5. Click on "Configure" at the top right corner.

THOMSON ST585				
SpeedTouch Broadband Connection Toolbox	[<u>Administrator</u>] <u>Home > Home Netw</u>	work > Interfaces > WLAN: SpeedTo Wireless Access Poin Configuration Interface Enabled: Physical Address: Network Name (SSID):	vuchD1ECEC nt - SpeedTouchD1ECEC Yes 00:14:7F:AF:27:D1 SpeedTouchD1ECEC	Overview <u>Details</u> <u>Configure</u> <u>Help</u>
Home Network → Devices → Interfaces		Interface Type: Actual Speed: Security Allow New Devices: Security Mode:	802.11b/g 54 Mbps New stations are allowed (automatically none	0

6. From the dropdown of "Channel Selection", select "Manual".

THOMSON ST585

SpeedTouch	[<u>Administrator</u>] <u>Home</u> > <u>Home Netwo</u>	rk > Interfaces > WLAN: SpeedTouch	<u>Overview Details</u> Configure <u>H</u>
Broadband Connection Toolbox Home Network → Devices → Interfaces		Vireless Access Point - Configuration Interface Enabled: Physical Address: Network Name (SSID): Interface Type: Actual Speed: Channel Selection: Region: Channel: Allow multicast from Broadband Network: Security Broadcast Network Name: Allow New Devices: Encryption:	 SpeedTouchD1ECEC 00:14:7F:AF:27:D1 SpeedTouchD1ECEC 802.11b/g 54 Mbps Automatic USA 6 3 9 New stations are allowed (automati Disabled Use WEP Encryption Use WPA-PSK Encryption

7. The "Channel" option should now turn into a dropdown.

SpeedTouch	Home > Home Net	work > Interfaces > WLAN: SpeedTouch	<u>Overview</u> <u>Details</u> Configure <u>He</u> <u>D1ECEC</u>
Broadband Connection Toolbox Home Network → Devices → Interfaces		Wireless Access Point - Configuration Interface Enabled: Physical Address: Network Name (SSID): Interface Type: Actual Speed: Channel Selection: Region: Channel: Allow multicast from Broadband Network: Security Broadcast Network Name:	SpeedTouchD1ECEC OU:14:7F-AF-27:D1 SpeedTouchD1ECEC 802.11b/g 54 Mbps Manual USA 6 C
		Allow New Devices.	New stations are allowed (automativ

8. Select the channel to use and click "Apply" at the bottom right.

THOMSON ST585			
SpeedTouch Broadband Connection	[Administrator] Home > Home Net	work > Interfaces > WLAN: SpeedTouch Wireless Access Point • Configuration	DIECEC • SpeedTouchD1ECEC
Toolbox Home Network → Devices → Interfaces		Interface Enabled: Physical Address: Network Name (SSID): Interface Type: Actual Speed: Channel Selection: Region: Channel: Allow multicast from Broadband Network: Security Broadcast Network Name: Allow New Devices: Encryption:	 O:14:7F:AF:27:D1 SpeedTouchD1ECEC 802.11b/g 54 Mbps Manual USA 9 USA 9 O New stations are allowed (automati Disabled Use WEP Encryption Use WEPA-PSK Encryption